



General conditions of storage, installation, use and maintenance of the product

The delivered product must be stored, installed, used and maintained in dry and protected place, with temperature between 5°C and 35°C and relative humidity between 40% and 70%.

We don't accept any liability arising from non-compliance with this recommendation.

For cleaning and maintenance of raised floors we always advisable to rely on specialized firms.



Panel cleaning

HPL surfaces do not require specific treatment once they have been installed. In fact, the surface only needs to be vacuumed carefully using a vacuum cleaner and then washed with rotating felt brushes.

Plastic laminate surfaces need only to be vacuum cleaned daily, if necessary alternate by cleaning with a cloth soaked in warm water that has been well wrung-out.

A neutral detergent can be used, diluted to half the concentration which is recommended by the manufacturer of the detergent.

Once a week a vacuum cleaner with rotating felt brushes should be used. Wax should not be applied because it significantly reduces the anti-static properties of the flooring, and makes it slippery.



Maintenance tips

Pay attention to:

- do not use alkaline detergents;
- never apply liquids directly on the flooring: only use a damp cloth which has been well wrung-out;
- never use pumice, sandpaper, soda, soap, scotch-bite pads or other materials that may scratch the surface.

Take particular care not to leave water or other liquids on the surface or between the panels as this could damage the flooring if absorbed.